

INSTALLATION INSTRUCTIONS FOR

# PGK-QO2

BUSWAY UNIT  
GROUND CONVERSION KIT

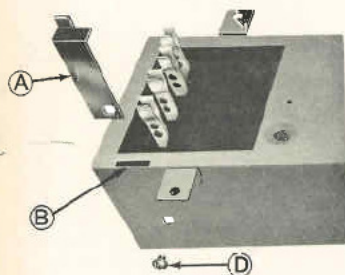


FIGURE 1.

1. Insert ground connector **A** through slot **B** in rear of plug-in unit.

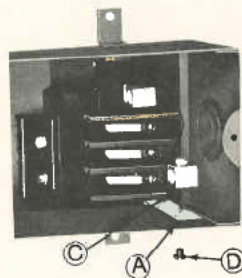


FIGURE 2.

2. Position ground lug **C** over square slot in ground connector **A** and secure using screw **D**.

**SQUARE D COMPANY**

MADE IN U.S.A.  
11-78

45123-228-01  
16

**SQUARE D®**  
INSTALLATION INSTRUCTIONS  
FOR 100 AMP PLUG-IN BUSWAY UNITS


TO INSTALL




Unit as received from factory.



Use screwdriver to remove plug-in opening cover, discard cover.

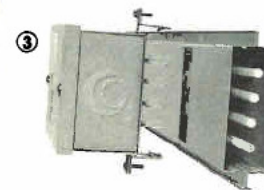

Loosen clamp screws and plug unit into plug-in opening. (SOME UNITS WILL HAVE MORE THAN TWO CLAMP SCREWS).

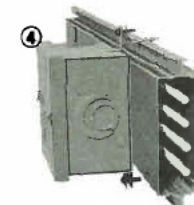

Secure unit to busway by tightening clamp screws until unit is locked on busway.

When units are removed, plug-in opening may be closed with ACP-1-OC.

MADE IN U.S.A.  
3-78

45123-216-01  
16